



MJC8Q400, FMS QUICK REFERENCE CARD

TURN ON	ON/OFF ACCEPT->
DIRECT TO ANY WPT	DTO type WPT ID ENTER ENTER
DIRECT TO FLIGHT PLAN WPT	DTO type WPT number from the list ENTER
ADD WPT TO FLIGHT PLAN	FPL type WPT ID ENTER ENTER
INSERT WPT INTO FLIGHT PLAN	FPL cursor to desired next WPT type WPT ID ENTER ENTER
DELETE WPT FROM FLIGHT PLAN	FPL cursor to desired WPT DEL DEL
ACTIVATE FLIGHT PLAN AFTER CHANGE	NAV FR type/verify FROM WPT number from the list TO type/verify TO WPT number from the list make sure NX WPT is correct or select from the list, ENTER
SET AFCS TO FLY LNAV	Turn NAV SOURCE selector on the glareshield, until FMS is the indicated nav source on the PFD, press LNAV on AFCS panel
ADD AIRWAY SEGMENT TO FLIGHT PLAN	FPL cursor after initial airway WPT LIST AIR/WAY-> select airway by number from the list ENTER type final WPT number from the list ENTER
DIRECT TO ANY HOLDING	DTO HOLDING-> cursor to FIX enter WPT id ENTER ENTER adjust whatever parameters needed DTO HOLD->
DIRECT TO PROCEDURAL HOLDING	DTO HOLDING-> cursor to FIX type the holding number (WPT with /H) from the list DTO HOLD->
ADD SID TO THE FLIGHT PLAN	FPL MENU DEPART-> type airport id (if not present), 2x ENTER select runway Id from the list ENTER select SID id from the list ENTER select transition from the list (if any) ENTER ENTER to activate
ADD STAR TO THE FLIGHT PLAN	FPL MENU ARRIVE-> type airport id (if not present), 2x ENTER select runway Id from the list ENTER select STAR id from the list ENTER select transition from the list (if any) ENTER ENTER to activate
ERASE FLIGHT PLAN	FPL type "99" ENTER
REVERSE FLIGHT PLAN	FPL MENU NEXT INVERT FPL->
SAVE FLIGHT PLAN	FPL MENU STORE FPL-> type departure airport Id and arrival airport Id (no spaces) ENTER
RETRIEVE FLIGHT PLAN	FPL type "99" ENTER type departure airport Id ENTER ENTER copy PLT RTE-> select route number from the list ENTER
ARM VNAV FOR ENROUTE DESCEND	VNAV cursor to TO select WPT number from the list ENTER enter displacement if required ENTER enter the crossing altitude in feet (if not yet present) ENTER enter the desired Vertical Speed ENTER to activate <i>2 minutes prior to reaching the TOD, arm the VNAV on the AFCS panel, please note LNAV must be active for VNAV to engage and the altitude selector must be set lower than the current altitude</i>
ACTIVATE VNAV FOR IMMEDIATE DESCEND (to meet the ATC crossing restriction)	FPL find the desired WPT (don't put cursor over it) press LSK on the right side adjacent to the WPT, under ALT/FL type the desired altitude in feet ENTER VNAV VTO-> select WPT number from the list ENTER to activate activate VNAV on AFCS panel, <i>please note LNAV must be active for VNAV to engage and the altitude selector must be set lower than the current altitude</i>
PLAY THE PASSENGER ANNOUNCEMENT	DATA CABIN DISP-> adjacent to the desired announcement, PLAY->
REQUEST GROUND POWER UNIT	DATA SERVICES-> REQUEST <i>It will take a minute for a GPU to become available</i>